

The display of points can be manually controlled by turning off the display of points styles and point label styles in individual point groups, but there is another method to more quickly control point display.

Right click on the Point Groups heading in the Prospector tab and select *Properties...* to open the Point Groups window. Civil 3D controls the display of points based on the order they are listed in this window, starting at the bottom of the list and working upward. In other words, the display properties of a group at the bottom of the list will be overridden by the display properties of the groups above it.

To further explain how the display order in the Points Groups window works, refer to the image below. The *<No Display>* group is set up by default to turn off the display of points. Since the *<No Display>* group is near the top of the points group list, its display properties (no display) will overwrite, or suppress, the display of all of the other point groups in the listing below it. Only one point group, the *EX - Fence* group, is listed above the *<No Display>* group, so the points in the *EX - Fence* group will be the only ones to be displayed in the drawing.

