


Profile label sets can be applied to profiles in a drawing. These label sets are used to automatically label features such as PVI stations and elevations and the grade between PVIs. This guide summarizes the profile label sets that are provided with the Minnesota Drawing Template.


_No Display

Suppresses all labels along the alignment.

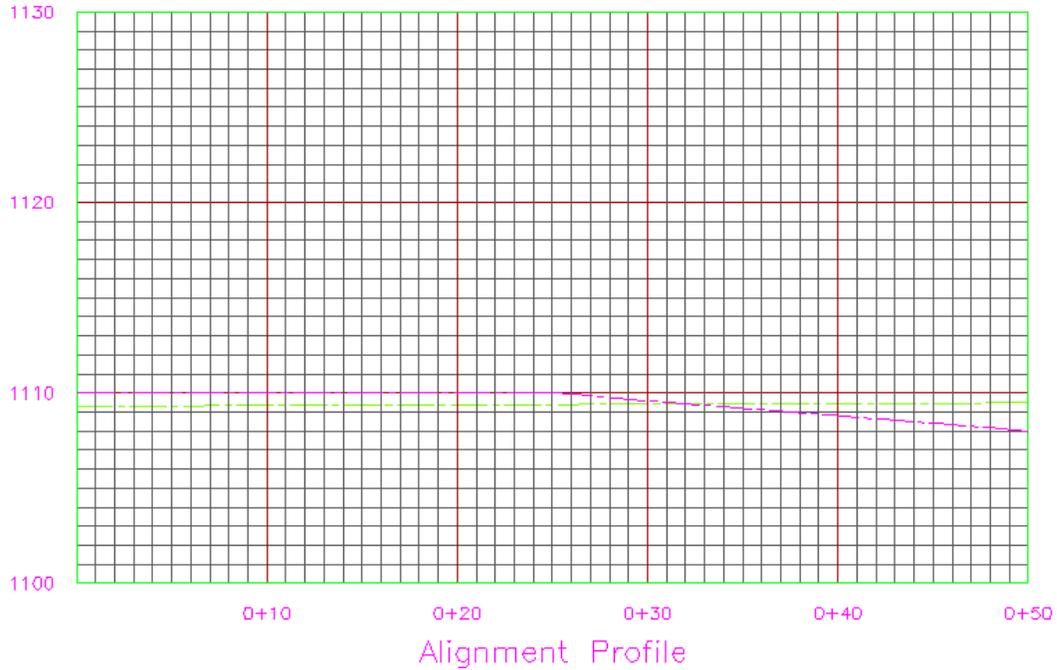


Finished

PVI stations and elevations and the grade between PVI locations are displayed in the profile view.

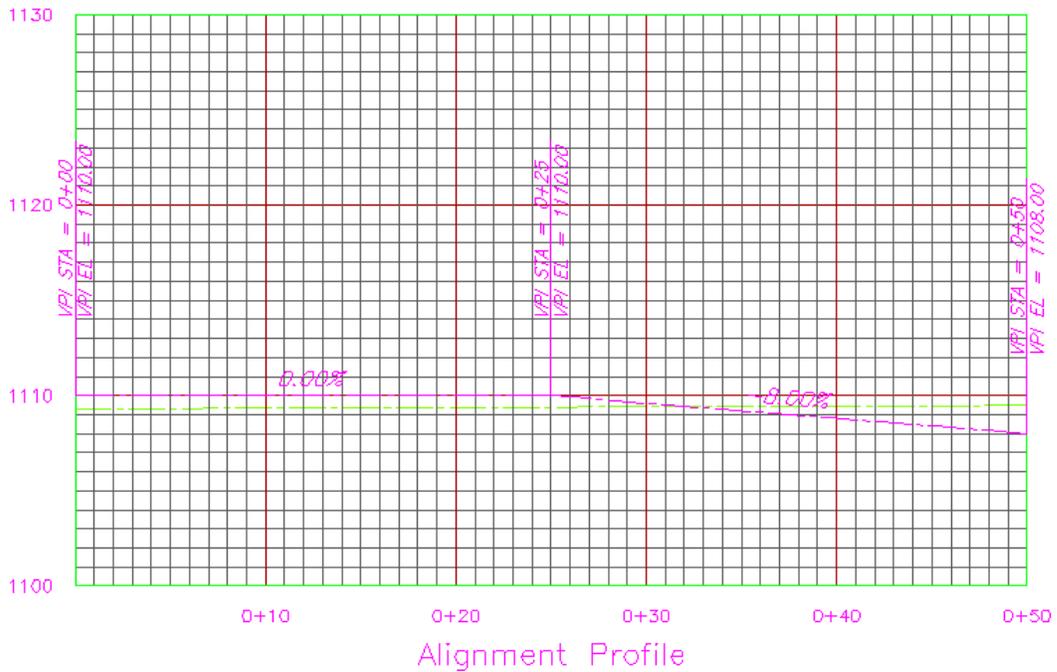

Waterway

Waterway grade break stations and elevations and the grade between grade break locations are displayed in the profile view.

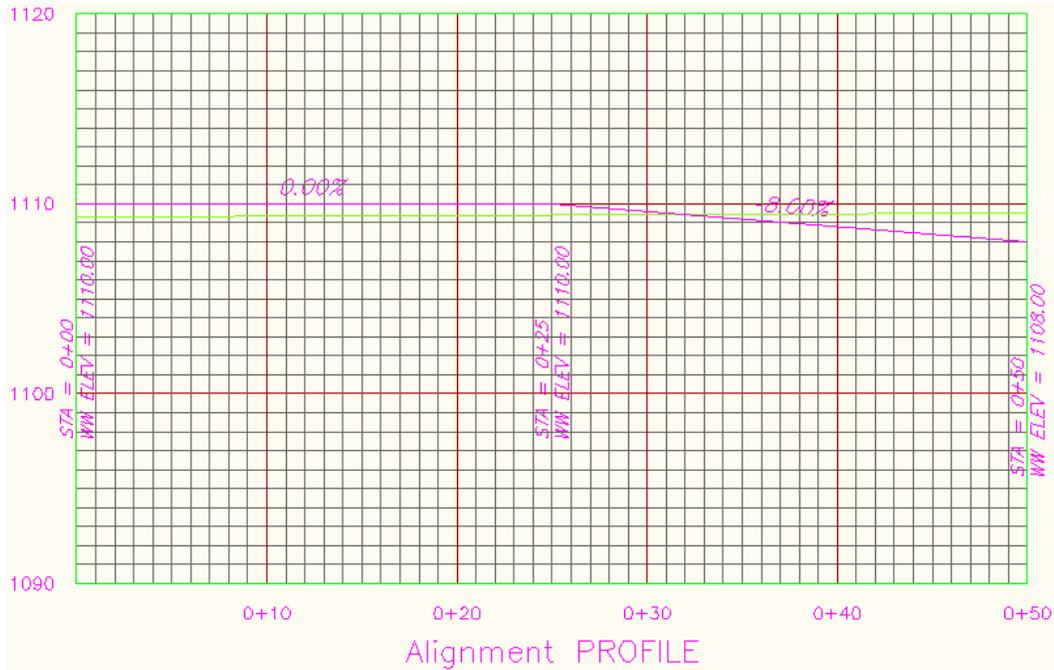

To change the profile label set assigned to a profile, select the profile in the drawing and select *Edit Profile Labels* from the Contextual Ribbon for the profile that appears, or right click and select *Edit Labels...* The *Profile Labels* window will open. Click on the *Import label set...* button and select the label set that you want to apply to the profile.