



FACT SHEET

Lateral Effect

Eng - 19

October 5, 1999

What is lateral effect?

Lateral effect is the distance on each side of a tile or ditch where the water in the soil is affected by the presence of the ditch or tile within a given period of time.

How close to the wetlands can I get with my drainage system?

When installing or repairing drainage in an area that may have wetlands, or has identified wetlands, it is advised to contact the Natural Resources Conservation Service (NRCS) office in your county. If a wetland is altered by a drainage system, a landowner or operator or both may become ineligible for USDA program benefits. How close to the wetland(s) the drain system can be installed without altering the wetland(s) is dependent on the effective depth of the drain and the soil type(s) between the drain and the wetland. The minimum offset distances for your site will be given to you by the NRCS field office on a lateral effect worksheet.


What are these "minimum offset distances" and where should I measure them?

The minimum offset distances listed on the lateral effect worksheet for your site should be the minimum distances from the outer edge of any wetland to the centerline of the tile line or to the toe of the ditch bank for open drainage ditches. See figure on the back of this page. The effective depth of your drainage system near the wetland (s) will determine which distance from the lateral effect worksheet you should use. The location of the edge of the wetland may not be clear. It is recommended that you contact your local NRCS District Conservationist for assistance in locating the edge of the wetland. A Request for Certified Wetland Determination/Delineation (CPA-038 form) will need to be completed for a wetland delineation.


Why do I have to stay so far from the wetland?

Food Security Act (FSA) rules require that the hydrology of wetlands cannot be altered by new drainage systems or by improvements to an existing drainage system. Under current FSA rules, an area is considered to be a wetland if there is saturation of any part of the top 12 inches of soil for a period of 14 or more consecutive days during the growing season. New drainage systems (or improvements to existing systems) must be located so that the 14 day (or more) period of saturation is not shortened. When drainage systems are installed to improve crop production, the ditch or tile is sized and spaced to remove water from the root zone quickly enough so that crop damage does not occur, often in 2 to 3 days. Hence, the distance affected by a drainage system designed for a 14 day period will be significantly greater than for a system designed for 3 days.

Example: Using a silty clay loam soil as an example, when tiling for crop production, a 5" tile installed at a 4' depth would be spaced at 90 foot intervals. When tiling in the vicinity of a wetland, a 5" tile at a 4' depth (or a ditch with a 4' effective depth) would need to be kept a minimum of 130 feet from the edge of the wetland due to the lateral effect. This distance varies by soil type. Specific information for a given tract needs to be requested from the NRCS local office.

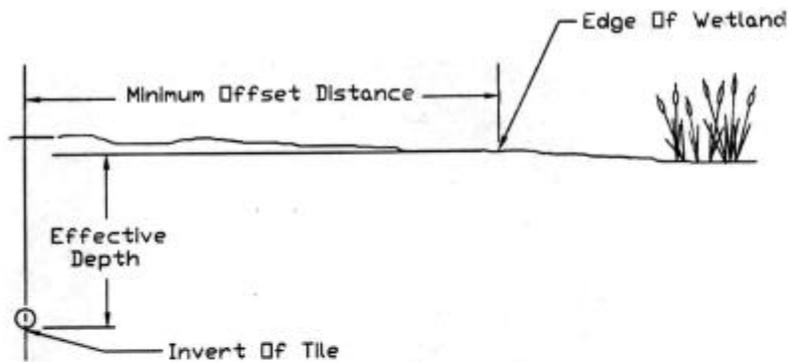

TILE DRAIN SYSTEM

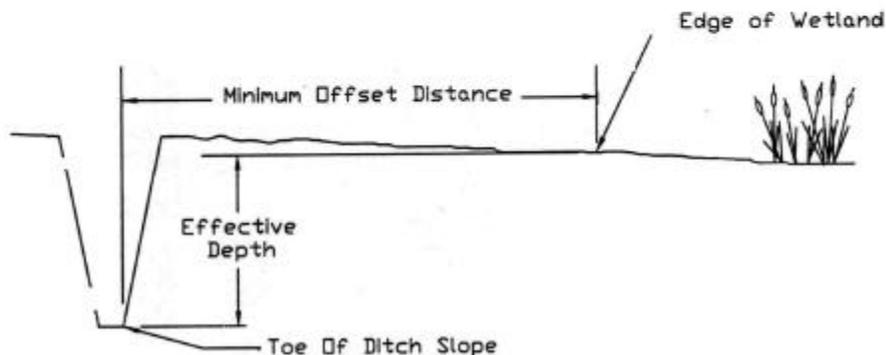

OPEN DITCH SYSTEM

I was told to complete a Request for Certified Wetland Determination/Delineation (CPA-038) form. What will this do?

The NRCS will issue a certified wetland determination upon the written request of the landowner or operator (form CPA-038). A previous wetland determination stays in effect as long as the land is used for agricultural purposes (unless a violation occurs). The certified wetland determination may result in adding, changing, or removing wetlands from a previous determination. In short, a certified wetland determination will result in a final and best determination for a tract and is required for in-field assistance. Changes in determinations may be appealed.

What is Encirclement?

Encirclement is the cutting off of the water supply to a wetland by interrupting the flow of surface or subsurface water that keeps the wetland wet. A tile line or ditch can act as an underground diversion, or surface intakes or a ditch can intercept surface water and keep it from reaching the wetland. A tile placed adjacent to a wetland across the portion of the landscape that allows groundwater to reach the wetland to keep it wet is acting as an underground diversion.

The United States Department of Agriculture (USDA) prohibits discrimination in all its programs and activities on the basis of race, color, national origin, gender, religion, age, disability, political beliefs, sexual orientation, and marital or family status. (Not all prohibited bases apply to all programs). Persons with disabilities who require alternative means for communication of program information (Braille, large print, audiotape, etc.) should contact the USDA's TARGET Center at 202 720-2600 (voice and TDD).

To file a complaint of discrimination, write USDA, Director, Office of Civil Rights, Room 326W, Whitten Building, 14th and Independence Avenue, SW, Washington, DC 20250-9410 or call 202-720-5964 (voice or TDD). USDA is an equal employment provider and employer.

Lateral Effect Worksheet

May 21, 1999

Landowner : _____ Prepared by: _____

County: _____ Location: _____ Date: _____

The minimum offset distances (also called lateral effect distances) have been determined for the site requested. The distances depend on the soil type and the effective depth of the drain (tile or ditch). See the Lateral Effect Fact Sheet (Eng-19) for further information on lateral effect.

Soil Name	Soil Symbol	Minimum Offset Distances, feet			
		2' depth	3' depth	4' depth	5' depth

The minimum offset distances listed above should be the minimum distance from the outer edge of any wetland to the centerline of the tile line or to the toe of the ditch bank for open drainage ditches. Use the soil the tile is actually installed in. Multiple soils may be given in the table if they are present on the tract.

